


## 1. Compatible suffix letter for each model

Suffix letter	Model
E or later	DP-MB311EUT2
F or later	DP-MB311JTT2, DP-MB251CXT2, KX-MB2571RUT2

## 2. How to check suffix letter in the serial number and “T2” letter in the model number

Serial number label is pasted on the main name plate and “T2” letter is printed on its plate. (Refer to example in below.)

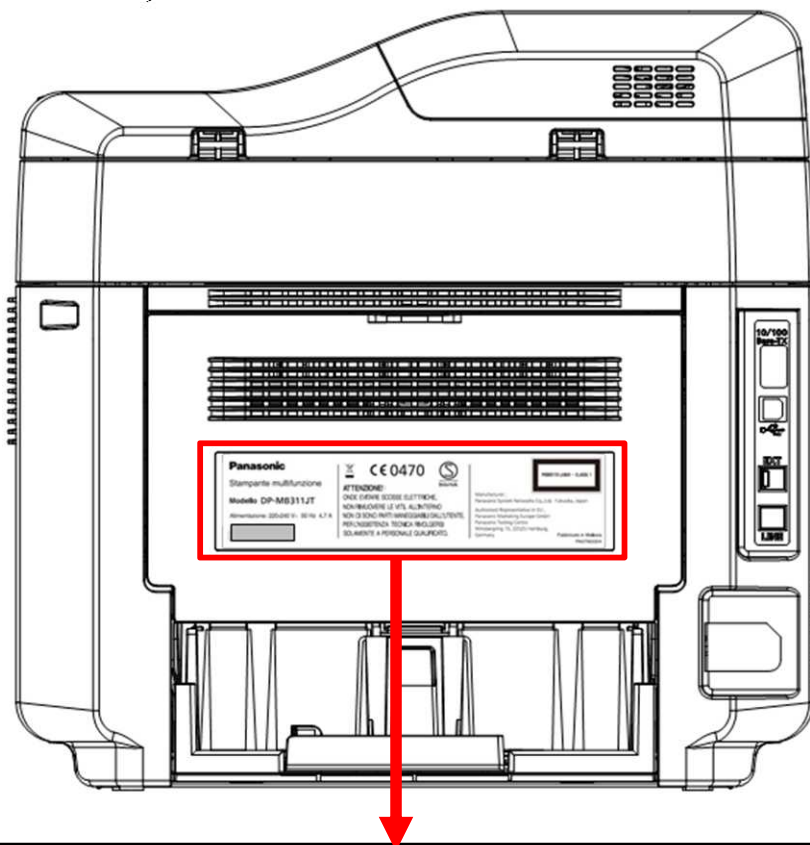

Example

5BAF **A** 001001

Suffix letter (Refer to above suffix table)

Check here.