

Compatible Model and Peripheral Device Lists

Early Warning Software

- As of June 2017-

Depending on the connected projector model, the settings on the projector side, the setting items on the software, and the functions available for use will differ when using this software. Be sure to refer to the following tables before use.

Device model list

Projector*1

NTN91000*2	39	PT-DW6300	13
NTN91001*2	39	PT-DW7000*4	16
NTN91002*2	38	PT-DW8300	12
NTN91003*2*3	38	PT-DW10000*4	15
PT-D4000	17	PT-DX100	6
PT-D5000	13	PT-DX500	14
PT-D5700	17	PT-DX610	13
PT-D6000	13	PT-DX800	13
PT-D7700*4	16	PT-DX810	13
PT-D10000*4	15	PT-DX820	6
PT-D12000	11	PT-DZ10K	5
PT-DS12K	5	PT-DZ13K	5
PT-DS20K	5	PT-DZ16K	5
PT-DS20K2	6	PT-DZ16K2	6
PT-DS100XE*4	12	PT-DZ21K	5
PT-DS8500	12	PT-DZ21K2	6
PT-DW11K	5	PT-DZ110XE*4	12
PT-DW17K	5	PT-DZ570	14
PT-DW17K2	6	PT-DZ680	13
PT-DW90XE*4	12	PT-DZ770	13
PT-DW100	11	PT-DZ780	6
PT-DW105XEA*4	12	PT-DZ870	6
PT-DW530	14	PT-DZ6700	13
PT-DW640	13	PT-DZ6710	13
PT-DW730	13	PT-DZ8700	12
PT-DW740	13	PT-DZ12000	11
PT-DW750	6	PT-EW530	20
PT-DW830	6	PT-EW540	18
PT-DW5100	17	PT-EW550	19

PT-EW630	20	PT-LW330	34
PT-EW640	18	PT-LW362 ⁴	34
PT-EW650	19	PT-LX26H	35
PT-EW730	18	PT-LX30H	35
PT-EX12K	21	PT-LZ370	33
PT-EX16K	21	PT-RQ13K	5
PT-EX500	20	PT-RQ32K ³	5
PT-EX510 ⁵	18	PT-RS11K	5
PT-EX520	19	PT-RS30K	5
PT-EX600	20	PT-RW330	10
PT-EX610	18	PT-RW430	9
PT-EX620	19	PT-RW620	6
PT-EX800	18	PT-RW630	6
PT-EZ57	19	PT-RW730	6
PT-EZ570	20	PT-RW930	6
PT-EZ580	18	PT-RX110	6
PT-EZ590	19	PT-RZ12K	5
PT-EZ770	18	PT-RZ31K	5
PT-F100NT	32	PT-RZ370	10
PT-F200NT	32	PT-RZ470	9
PT-F300	31	PT-RZ475	8
PT-F300NT	31	PT-RZ570	7
PT-FW100NT	32	PT-RZ575	7
PT-FW300	31	PT-RZ660	6
PT-FW300NT	31	PT-RZ670	6
PT-FW430	30	PT-RZ770	6
PT-FW530	19	PT-RZ970	6
PT-FX400	30	PT-ST10	37
PT-FX500	19	PT-TW230	35
PT-FZ570	19	PT-TW231R	35
PT-JW130F ⁴	39	PT-TW250	34
PT-JW130G ⁴	39	PT-TW340	34
PT-JW130H ⁴	39	PT-TW341R	34
PT-JX200F ^{3*4}	38	PT-TW342	34
PT-JX200G ⁴	38	PT-TW343R	34
PT-JX200H ⁴	38	PT-TX310	34
PT-LB1	37	PT-TX312	34
PT-LB1V	37	PT-TX400	34
PT-LB2	37	PT-TX402	34
PT-LB2V	37	PT-VW330	27
PT-LB3	37	PT-VW340 ⁵	29
PT-LB90NT	36	PT-VW345N	23
PT-LB330	34	PT-VW350 ⁵	29
PT-LB332 ⁴	34	PT-VW355N	23
PT-LB360	34	PT-VW430	27
PT-LB382	34	PT-VW431D	27
PT-LB412	34	PT-VW435N	28
PT-LW25H	35	PT-VW440	27
PT-LW280	34	PT-VW530 ⁵	25
PT-LW312	34	PT-VW535N	23

PT-VW540*5	24
PT-VW545N	22
PT-VX41	27
PT-VX42*5	29
PT-VX46*5	29
PT-VX50*5	25
PT-VX51*5	24
PT-VX60*5	25
PT-VX61*5	24
PT-VX400	27
PT-VX400NT	28
PT-VX406*5	29
PT-VX410*5	29
PT-VX415N	23
PT-VX420*5	29
PT-VX421*5	29
PT-VX425N	23
PT-VX500	27
PT-VX501*5	27
PT-VX505N	28
PT-VX510	27
PT-VX600*5	25
PT-VX605N	23
PT-VX610	24
PT-VX615N	22
PT-VZ470*3*5	26
PT-VZ570*5	25
PT-VZ575N	23
PT-VZ580*5	24
PT-VZ585N	22
TH-D7700	16
TH-D10000	15
TH-DW7000	16
TH-DW10000	15

The software is not compatible with any device models not appearing in this "Device model list."

*1: Note on model groups

Devices are categorized into one of two groups depending on the type of information that can be accessed from them by the software.

The difference in the type of information that can be accessed for "rich information models" and "basic information models" is as follows.

○: Supported ×: Not supported

Item	Group designation based on accessible information	
	Rich information model	Basic information model
Group Name	○	○
IP address	○	○
Shutter	○	○
Model Name	○	○
Serial Number	○*	×
Selected input	○	○
Power	○	○
Selected LIGHT	○*	×
LIGHT Power / Operating mode	○	×
Signal Freq.	○	×
Main Version	○	×
Network Version	○*	×
Power on hours	○	○*
Temperature	○*	×
LIGHT status	○*	○*
Fan status	○*	×

* May not be accessible depending on the device.

*2: Model number of product sold in Japan. This will differ for products sold in other regions.

*3: The Device Profile Library file must be updated. Acquire a file from the PASS website to perform the update. For details on how to update the Device Profile Library file, refer to page 34 of the Early Warning Software Operating Instructions.

*4: Model number of product sold in regions other than Japan. This will differ for products sold in Japan.

*5: Not sold in Japan.

Peripheral device list

■ Peripheral devices

DIGITAL LINK Switcher

ET-YFB200 40

Network camera

Panasonic BB-S Series, DG-S Series, and WV-S Series network cameras are supported.

Allows the video shown on a display (projector or flat-panel display) to be checked remotely through a camera.

The software is not compatible with any peripheral devices not appearing in this "Peripheral device list."

■ PT-RQ32K / PT-RZ31K / PT-RS30K

■ PT-RQ13K

■ PT-RZ12K / PT-RS11K

■ PT-DZ21K / PT-DS20K / PT-DW17K / PT-DZ16K

■ PT-DZ13K / PT-DS12K / PT-DW11K / PT-DZ10K

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: A, D, E, J, T, U, blank; Lens: L, blank; Cabinet color: B, K, W, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	WEB control	ON
		Command port	1024
		PJLink control	ON
		Standby mode	Normal
	Functions	Status monitoring	○
Error, warning, and notification guidance displays		○	
Basic control functions (power, AV muting (shutter), etc.)		○	
Fan failure prediction		○	
Filter clog prediction		×	
Maintenance prediction		○	
Temperature information graph display		○	
Display of WEB control screen for devices		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Network camera video display		○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

- PT-RZ970 / PT-RW930 / PT-RX110 / PT-RZ770 / PT-RW730 / PT-RZ660 / PT-RW620
- PT-RZ670 / PT-RW630
- PT-DZ21K2 / PT-DS20K2 / PT-DW17K2 / PT-DZ16K2
- PT-DZ870 / PT-DW830 / PT-DX100
- PT-DZ780 / PT-DW750 / PT-DX820

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: A, D, E, J, T, U, blank; Lens: L, blank; Cabinet color: B, K, W, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	WEB control	ON
		Command port	1024
		PJLink control	ON
		Standby mode	Normal
Functions	Status monitoring	○	
	Error, warning, and notification guidance displays	○	
	Basic control functions (power, AV muting (shutter), etc.)	○	
	Fan failure prediction	○	
	Filter clog prediction	×	
	Maintenance prediction	○	
	Temperature information graph display	○	
	Display of WEB control screen for devices	○	
	System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○	
	Network camera video display	○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-RZ575 / PT-RZ570

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: A, D, J, T, blank; Cabinet color: B, W, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1* ¹	
	Password	panasonic* ²	
Projector settings	Network standby	—	
	Network control	—	
		WEB control	ON
		Command port	1024
		PJLink control	ON
	Standby mode	Normal	
Functions	Status monitoring	○	
	Error, warning, and notification guidance displays	○	
	Basic control functions (power, AV muting (shutter), etc.)	○	
	Fan failure prediction	○	
	Filter clog prediction	×	
	Maintenance prediction	○	
	Temperature information graph display	○	
	Display of WEB control screen for devices	○	
	System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○	
	Network camera video display	○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-RZ475

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, EA, U, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	WEB control	ON
		Command port	1024
		PJLink control	ON
		Standby mode	Normal
	Functions	Status monitoring	○
Error, warning, and notification guidance displays		○	
Basic control functions (power, AV muting (shutter), etc.)		○	
Fan failure prediction		×	
Filter clog prediction		×	
Maintenance prediction		○	
Temperature information graph display		○	
Display of WEB control screen for devices		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Network camera video display		○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-RZ470 / PT-RW430

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, EA, U, blank; Cabinet color: K, W, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	WEB control	ON
		Command port	1024
		PJLink control	ON
		Standby mode	Normal
	Functions	Status monitoring	○
Error, warning, and notification guidance displays		○	
Basic control functions (power, AV muting (shutter), etc.)		○	
Fan failure prediction		×	
Filter clog prediction		×	
Maintenance prediction		○	
Temperature information graph display		○	
Display of WEB control screen for devices		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Network camera video display		○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-RZ370 / PT-RW330

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, EA, U, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	—	
		WEB control	ON
		Command port	1024
		PJLink control	ON
	Standby mode	Normal	
Functions	Status monitoring	○	
	Error, warning, and notification guidance displays	○	
	Basic control functions (power, AV muting (shutter), etc.)	○	
	Fan failure prediction	×	
	Filter clog prediction	×	
	Maintenance prediction	○	
	Temperature information graph display	○	
	Display of WEB control screen for devices	○	
	System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○	
	Network camera video display	○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-DZ12000 / PT-D12000 / PT-DW100

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, U, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not required (LAN terminal installed) ^{*1}	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*2}	
	Password	panasonic ^{*3}	
Projector settings	Network standby	ON	
	Network control	—	
		WEB control	ON
		Command port	1024
		PJLink control	ON
	Standby mode	—	
Functions	Status monitoring	○	
	Error, warning, and notification guidance displays	○	
	Basic control functions (power, AV muting (shutter), etc.)	○	
	Fan failure prediction	×	
	Filter clog prediction	×	
	Maintenance prediction	○	
	Temperature information graph display	○	
	Display of WEB control screen for devices	○	
	System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○	
	Network camera video display	○	

*1: Of the commercially available expansion boards, the ET-MD77NT network board is not supported.
With expansion boards other than the ET-MD77NT, the network function on the expansion board side cannot be used (DVI, SDI, and other inputs are enabled).

The ET-MD100SD4 digital signal input board (for dual link HD-SDI) is supported.

*2: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*3: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-DZ8700 / PT-DS8500 / PT-DW8300 / PT-DZ110XE / PT-DS100XE / PT-DW90XE / PT-DW105XEA

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, U, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility
Optional accessories	Expansion boards	Not used
Connection to projector	IP address	Only fixed IP address supported
	User name	admin1* ¹
	Password	panasonic* ²
Projector settings	Network standby	—
	Network control	—
	WEB control	ON
	Command port	1024
	PJLink control	ON
	Standby mode	Normal
Functions	Status monitoring	○
	Error, warning, and notification guidance displays	○
	Basic control functions (power, AV muting (shutter), etc.)	○
	Fan failure prediction	○
	Filter clog prediction	×
	Maintenance prediction	○
	Temperature information graph display	○
	Display of WEB control screen for devices	○
	System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○
	Network camera video display	○

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-DZ770 / PT-DW740 / PT-DX810

■ PT-DZ680 / PT-DW640 / PT-DX610

■ PT-DW730 / PT-DX800

■ PT-DZ6710 / PT-DZ6700 / PT-DW6300 / PT-D6000 / PT-D5000

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, U, blank; Lens: L, blank; Cabinet color: S, K, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	WEB control	ON
		Command port	1024
		PJLink control	ON
		Standby mode	Normal
	Functions	Status monitoring	○
Error, warning, and notification guidance displays		○	
Basic control functions (power, AV muting (shutter), etc.)		○	
Fan failure prediction		○	
Filter clog prediction		×	
Maintenance prediction		○	
Temperature information graph display		○	
Display of WEB control screen for devices		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Network camera video display		○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-DZ570 / PT-DW530 / PT-DX500

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, U, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1* ¹	
	Password	panasonic* ²	
Projector settings	Network standby	—	
	Network control	WEB control	ON
		Command port	1024
		PJLink control	ON
		Standby mode	Normal
	Functions	Status monitoring	○
Error, warning, and notification guidance displays		○	
Basic control functions (power, AV muting (shutter), etc.)		○	
Fan failure prediction		×	
Filter clog prediction		×	
Maintenance prediction		○	
Temperature information graph display		○	
Display of WEB control screen for devices		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Network camera video display		○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

TH-DW10000 / TH-D10000 / PT-DW10000 / PT-D10000

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, U

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not required (LAN terminal installed) ^{*1}	
Connection to projector	IP address	Only fixed IP address supported	
	User name	user1	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	WEB control	—
		Command port	—
		PJLink control	—
		Standby mode	—
	Functions	Status monitoring	○
Error, warning, and notification guidance displays		○	
Basic control functions (power, AV muting (shutter), etc.)		○	
Fan failure prediction		×	
Filter clog prediction		×	
Maintenance prediction		○	
Temperature information graph display		○	
Display of WEB control screen for devices		○	
System log acquisition		×	
Network camera video display		○	

*1: Of the commercially available expansion boards, the ET-MD77NT network board is not supported.

With expansion boards other than the ET-MD77NT, the network function on the expansion board side cannot be used (DVI, SDI, and other inputs are enabled).

The ET-MD100SD4 digital signal input board (for dual link HD-SDI) is supported. (except for TH-D10000 and PT-D10000)

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

TH-D7700 / TH-DW7000 / PT-D7700 / PT-DW7000

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, U, blank; Cabinet color: K, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Expansion board required* ¹	
Connection to projector	IP address	Only fixed IP address supported	
	User name	user1	
	Password	panasonic* ²	
Projector settings	Network standby	—	
	Network control	WEB control	—
		Command port	—
		PJLink control	—
		Standby mode	—
	Functions	Status monitoring	○
Error, warning, and notification guidance displays		○	
Basic control functions (power, AV muting (shutter), etc.)		○	
Fan failure prediction		×	
Filter clog prediction		×	
Maintenance prediction		○	
Temperature information graph display		○	
Display of WEB control screen for devices		○	
System log acquisition		×	
Network camera video display		○	

*1: One of the following commercially available expansion boards with a network function is required.

Network board: ET-MD77NT

Digital signal input board (for SD-SDI): ET-MD77SD1

Digital signal input board (for HD-SDI): ET-MD77SD3

Digital signal input board (for DVI): ET-MD77DV

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-D5700 / PT-D4000 / PT-DW5100

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, U, blank; Lens: L, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	user1	
	Password	panasonic* ¹	
Projector settings	Network standby	—	
	Network control	WEB control	—
		Command port	—
		PJLink control	—
		Standby mode	—
	Functions	Status monitoring	○
Error, warning, and notification guidance displays		○	
Basic control functions (power, AV muting (shutter), etc.)		○	
Fan failure prediction		×	
Filter clog prediction		×	
Maintenance prediction		○	
Temperature information graph display		○	
Display of WEB control screen for devices		○	
System log acquisition		×	
Network camera video display		○	

*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-EZ770 / PT-EW730 / PT-EX800

■ PT-EZ580 / PT-EW640 / PT-EW540 / PT-EX610 / PT-EX510

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: D, J, Z, T, blank; Lens: L, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility
Optional accessories	Expansion boards	Not used
Connection to projector	IP address	Only fixed IP address supported
	User name	admin1 ^{*1}
	Password	panasonic ^{*2}
Projector settings	Network standby	—
	Network control	—
	WEB control	ON
	Command port	1024
	PJLink control	ON
	Standby mode	Normal
Functions	Status monitoring	○
	Error, warning, and notification guidance displays	○
	Basic control functions (power, AV muting (shutter), etc.)	○
	Fan failure prediction	○
	Filter clog prediction	×
	Maintenance prediction	○
	Temperature information graph display	○
	Display of WEB control screen for devices	○
	System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○
	Network camera video display	○

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-EZ590*3 / PT-EW650*3 / PT-EW550*3 / PT-EX620*3 / PT-EX520*3 / PT-EZ57*3

■ PT-FZ570*3 / PT-FW530*3 / PT-FX500*3

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: J, D, T, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility
Optional accessories	Expansion boards	Not used
Connection to projector	IP address	Only fixed IP address supported
	User name	admin1*1
	Password	panasonic*2
Projector settings	Network standby	—
	Network control	—
	WEB control	ON
	Command port	1024
	PJLink control	ON
	Standby mode	Normal
Functions	Status monitoring	○
	Error, warning, and notification guidance displays	○
	Basic control functions (power, AV muting (shutter), etc.)	○
	Fan failure prediction	○
	Filter clog prediction	×
	Maintenance prediction	○
	Temperature information graph display	○
	Display of WEB control screen for devices	○
	System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○
Network camera video display	○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

*3: Only devices for which the main microcomputer version is Ver.1.08 or later are supported. You can check the version in the device's WEB control screen.

PT-EZ570 / PT-EW630 / PT-EW530 / PT-EX600 / PT-EX500

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, EA, U, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	—	
		WEB control	ON
		Command port	1024
		PJLink control	ON
	Standby mode	Normal, Network	
Functions	Status monitoring	○	
	Error, warning, and notification guidance displays	○	
	Basic control functions (power, AV muting (shutter), etc.)	○	
	Fan failure prediction	×	
	Filter clog prediction	×	
	Maintenance prediction	○	
	Temperature information graph display	○	
	Display of WEB control screen for devices	○	
	System log acquisition	×	
	Network camera video display	○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-EX16K

■ PT-EX12K

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, U, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	WEB control	ON
		Command port	—
		PJLink control	ON
		Standby mode	—
	Functions	Status monitoring	○
Error, warning, and notification guidance displays		○	
Basic control functions (power, AV muting (shutter), etc.)		○	
Fan failure prediction		×	
Filter clog prediction		×	
Maintenance prediction		○	
Temperature information graph display		○	
Display of WEB control screen for devices		○	
System log acquisition		×	
Network camera video display	○		

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-VZ585N / PT-VW545N / PT-VX615N

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: D, J, T, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility
Optional accessories	Expansion boards	Not used
Connection to projector	IP address	Only fixed IP address supported
	User name	admin1 ^{*1}
	Password	panasonic ^{*2}
Projector settings	Network standby	—
	Network control	
	WEB control	ON
	Command control	ON
	Command port	1024
	PJLink control	ON
	ECO management	
Standby mode	Normal	
Functions	Status monitoring	○
	Error, warning, and notification guidance displays	○
	Basic control functions (power, AV muting (shutter), etc.)	○
	Fan failure prediction	○
	Filter clog prediction	×
	Maintenance prediction	○
	Temperature information graph display	○
	Display of WEB control screen for devices	○
	System log acquisition	×
Network camera video display	○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but connection will be established as a basic information model.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VZ575N / PT-VW535N / PT-VX605N

■ PT-VW355N / PT-VX425N

■ PT-VW345N / PT-VX415N

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: D, J, T, Z, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	WEB control	—
		Command port	—
		PJLink control	—
		Standby mode	Normal
	Functions	Status monitoring	○
Error, warning, and notification guidance displays		○	
Basic control functions (power, AV muting (shutter), etc.)		○	
Fan failure prediction		×	
Filter clog prediction		×	
Maintenance prediction		○	
Temperature information graph display		○	
Display of WEB control screen for devices		○	
System log acquisition		×	
Network camera video display		○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but connection will be established as a basic information model.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VZ580 / PT-VW540 / PT-VX610

■ PT-VX61 / PT-VX51

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: D, J, K, K1, T, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility
Optional accessories	Expansion boards	Not used
Connection to projector	IP address	Only fixed IP address supported
	User name	admin1 ^{*1}
	Password	panasonic ^{*2}
Projector settings	Network standby	—
	Network control	
	WEB control	ON
	Command control	ON
	Command port	1024
	PJLink control	ON
	ECO management	
Standby mode	Normal	
Functions	Status monitoring	○
	Error, warning, and notification guidance displays	○
	Basic control functions (power, AV muting (shutter), etc.)	○
	Fan failure prediction	○
	Filter clog prediction	×
	Maintenance prediction	○
	Temperature information graph display	○
	Display of WEB control screen for devices	○
	System log acquisition	×
	Network camera video display	○

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VZ570 / PT-VW530 / PT-VX600

■ PT-VX60 / PT-VX50

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: D, T, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	ON	
		WEB control	—
		Command port	—
		PJLink control	—
	Standby mode	Normal	
Functions	Status monitoring	○	
	Error, warning, and notification guidance displays	○	
	Basic control functions (power, AV muting (shutter), etc.)	○	
	Fan failure prediction	×	
	Filter clog prediction	×	
	Maintenance prediction	○	
	Temperature information graph display	○	
	Display of WEB control screen for devices	○	
	System log acquisition	×	
Network camera video display	○		

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-VZ470

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: D, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	ON	
		WEB control	—
		Command port	—
		PJLink control	—
	Standby mode	Normal	
Functions	Status monitoring	○	
	Error, warning, and notification guidance displays	○	
	Basic control functions (power, AV muting (shutter), etc.)	○	
	Fan failure prediction	○	
	Filter clog prediction	×	
	Maintenance prediction	○	
	Temperature information graph display	○	
	Display of WEB control screen for devices	○	
	System log acquisition	×	
	Network camera video display	○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VW440 / PT-VX510

■ PT-VW431D

■ PT-VW430 / PT-VX501 / PT-VX500

■ PT-VX41

■ PT-VW330 / PT-VX400

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, EA, U, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	ON	
		WEB control	—
		Command port	—
		PJLink control	—
	Standby mode	Network	
Functions	Status monitoring	○	
	Error, warning, and notification guidance displays	○	
	Basic control functions (power, AV muting (shutter), etc.)	○	
	Fan failure prediction	×	
	Filter clog prediction	×	
	Maintenance prediction	○	
	Temperature information graph display	○	
	Display of WEB control screen for devices	○	
	System log acquisition	×	
	Network camera video display	○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VW435N / PT-VX505N

■ PT-VX400NT

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, EA, U, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	ON	
		WEB control	—
		Command port	—
		PJLink control	—
	Standby mode	Network	
Functions	Status monitoring	○	
	Error, warning, and notification guidance displays	○	
	Basic control functions (power, AV muting (shutter), etc.)	○	
	Fan failure prediction	×	
	Filter clog prediction	×	
	Maintenance prediction	○	
	Temperature information graph display	○	
	Display of WEB control screen for devices	○	
	System log acquisition	×	
	Network camera video display	○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VW350 / PT-VX420

■ PT-VW340 / PT-VX410 / PT-VX42

■ PT-VX421

■ PT-VX406 / PT-VX46

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: D, EA, J, T, Z, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	WEB control	—
		Command port	—
		PJLink control	—
		Standby mode	Normal
	Functions	Status monitoring	○
Error, warning, and notification guidance displays		○	
Basic control functions (power, AV muting (shutter), etc.)		○	
Fan failure prediction		×	
Filter clog prediction		×	
Maintenance prediction		○	
Temperature information graph display		○	
Display of WEB control screen for devices		○	
System log acquisition		×	
Network camera video display	○		

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-FW430 / PT-FX400

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, EA, U, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	ON	
		WEB control	—
		Command port	—
		PJLink control	—
	Standby mode	Normal	
Functions	Status monitoring	○	
	Error, warning, and notification guidance displays	○	
	Basic control functions (power, AV muting (shutter), etc.)	○	
	Fan failure prediction	×	
	Filter clog prediction	×	
	Maintenance prediction	○	
	Temperature information graph display	○	
	Display of WEB control screen for devices	○	
	System log acquisition	×	
	Network camera video display	○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-FW300NT / PT-FW300 / PT-F300NT / PT-F300

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, EA, U, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	ON	
	Network control	WEB control	—
		Command port	—
		PJLink control	—
		Standby mode	—
Functions	Status monitoring	○	
	Error, warning, and notification guidance displays	○	
	Basic control functions (power, AV muting (shutter), etc.)	○	
	Fan failure prediction	×	
	Filter clog prediction	×	
	Maintenance prediction	○	
	Temperature information graph display	○	
	Display of WEB control screen for devices	○	
	System log acquisition	×	
	Network camera video display	○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-FW100NT / PT-F100NT

■ PT-F200NT

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, EA, U, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	user1	
	Password	No password set* ¹	
Projector settings	Network standby	ON	
	Network control	—	
		WEB control	ON
		Command port	—
		PJLink control	—
	Standby mode	—	
Functions	Status monitoring	○	
	Error, warning, and notification guidance displays	○	
	Basic control functions (power, AV muting (shutter), etc.)	○	
	Fan failure prediction	×	
	Filter clog prediction	×	
	Maintenance prediction	○	
	Temperature information graph display	×	
	Display of WEB control screen for devices	○	
	System log acquisition	×	
	Network camera video display	○	

*1: This is the setting provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-LZ370

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, EA, U, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	ON	
		WEB control	—
		Command port	—
		PJLink control	—
	Standby mode	Normal	
Functions	Status monitoring	○	
	Error, warning, and notification guidance displays	○	
	Basic control functions (power, AV muting (shutter), etc.)	○	
	Fan failure prediction	×	
	Filter clog prediction	×	
	Maintenance prediction	○	
	Temperature information graph display	○	
	Display of WEB control screen for devices	○	
	System log acquisition	×	
	Network camera video display	○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-LW362 / PT-LW312 / PT-LB412 / PT-LB382 / PT-LB332

■ PT-LW330*2 / PT-LW280*2 / PT-LB360*2 / PT-LB330*2

■ PT-TW343R / PT-TW342 / PT-TX402 / PT-TX312

■ PT-TW341R*2 / PT-TW340*2 / PT-TW250*2 / PT-TX400*2 / PT-TX310*2

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: D, J, blank

Model group: **Basic information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin	
	Password	admin*1	
Projector settings	Network standby	—	
	Network control	WEB control	—
		Command port	—
		PJLink control	—
		Standby mode	Normal
	Functions See *1: Note on model groups" on page 3 for available items.	Status monitoring	○
Error, warning, and notification guidance displays		○	
Basic control functions (power, AV muting (shutter), etc.)		○	
Fan failure prediction		×	
Filter clog prediction		×	
Maintenance prediction		×	
Temperature information graph display		×	
Display of WEB control screen for devices		○	
System log acquisition		×	
Network camera video display	○		

*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

*2: Only devices with serial numbers that start with "B" or "DB53" are supported.

■ PT-LW25H / PT-LX30H / PT-LX26H

■ PT-TW231R / PT-TW230

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, EA, U, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	ON	
		WEB control	—
		Command port	—
		PJLink control	—
	Standby mode	Network	
Functions	Status monitoring	○	
	Error, warning, and notification guidance displays	○	
	Basic control functions (power, AV muting (shutter), etc.)	○	
	Fan failure prediction	×	
	Filter clog prediction	×	
	Maintenance prediction	○	
	Temperature information graph display	○	
	Display of WEB control screen for devices	○	
	System log acquisition	×	
Network camera video display	○		

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

PT-LB90NT

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, EA, U, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	ON	
		WEB control	—
		Command port	—
		PJLink control	—
	Standby mode	Normal	
Functions	Status monitoring	○	
	Error, warning, and notification guidance displays	○	
	Basic control functions (power, AV muting (shutter), etc.)	○	
	Fan failure prediction	×	
	Filter clog prediction	×	
	Maintenance prediction	○	
	Temperature information graph display	○	
	Display of WEB control screen for devices	○	
	System log acquisition	×	
	Network camera video display	○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-LB3 / PT-LB2V / PT-LB2 / PT-LB1V / PT-LB1 / PT-ST10

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: E, EA, U, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	User name	admin1 ^{*1}	
	Password	panasonic ^{*2}	
Projector settings	Network standby	—	
	Network control	ON	
		WEB control	—
		Command port	—
		PJLink control	—
	Standby mode	Normal	
Functions	Status monitoring	○	
	Error, warning, and notification guidance displays	○	
	Basic control functions (power, AV muting (shutter), etc.)	○	
	Fan failure prediction	×	
	Filter clog prediction	×	
	Maintenance prediction	○	
	Temperature information graph display	○	
	Display of WEB control screen for devices	○	
	System log acquisition	×	
	Network camera video display	○	

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ NTN91003 / NTN91002

■ PT-JX200F / PT-JX200G / PT-JX200H

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: D, E, K, T, U; Cabinet color: B, W, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility
Optional accessories	Expansion boards	Not used
Connection to projector	IP address	Only fixed IP address supported
	User name	admin1 ^{*1}
	Password	panasonic ^{*2}
Projector settings	Network standby	—
	Network control	—
	WEB control	ON
	Command port	1024
	PJLink control	ON
	Standby mode	Normal
Functions	Status monitoring	○
	Error, warning, and notification guidance displays	○
	Basic control functions (power, AV muting (shutter), etc.)	○
	Fan failure prediction	○
	Filter clog prediction	×
	Maintenance prediction	○
	Temperature information graph display	○
	Display of WEB control screen for devices	○
	System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○
	Network camera video display	○

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ NTN91001 / NTN91000

■ PT-JW130F / PT-JW130G / PT-JW130H

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: D, E, K, T, U; Cabinet color: B, W, blank

Model group: **Rich information model**

○: Supported ×: Not supported —: Not available

		Setting / Compatibility
Optional accessories	Expansion boards	Not used
Connection to projector	IP address	Only fixed IP address supported
	User name	admin1 ^{*1}
	Password	panasonic ^{*2}
Projector settings	Network standby	—
	Network control	—
	WEB control	ON
	Command port	1024
	PJLink control	ON
	Standby mode	Normal
Functions	Status monitoring	○
	Error, warning, and notification guidance displays	○
	Basic control functions (power, AV muting (shutter), etc.)	○
	Fan failure prediction	○
	Filter clog prediction	×
	Maintenance prediction	○
	Temperature information graph display	○
	Display of WEB control screen for devices	○
	System log acquisition	×
	Network camera video display	○

*1: This is the user name provided at the time of shipment. A connection is also possible with user1, but some information cannot be acquired and displayed.

*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

ET-YFB200

The letters* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

* Shipping destination: G, blank

○: Supported ×: Not supported —: Not available

		Setting / Compatibility
Connection to DIGITAL LINK Switcher	IP address	Only fixed IP address supported
	User name	admin1 ^{*1}
	Password	panasonic ^{*2}
DIGITAL LINK Switcher settings	Network standby	—
	Network control	—
	WEB control	ON
	Command port	1024
	PJLink control	ON
Functions	DIGITAL LINK Switcher I/O status display	○
	Fan status display	○
	WEB control screen display	×

*1: This is the user name provided at the time of shipment. Connect using a user with administrator privileges.

*2: This is the password provided at the time of shipment. The password is identical to that used for WEB control of the DIGITAL LINK switcher unit.