

## ◆ Binary&Color - Multi-Stream

### <Function>

The MultiStream function enables a single scan to be saved as two separate formats simultaneously.

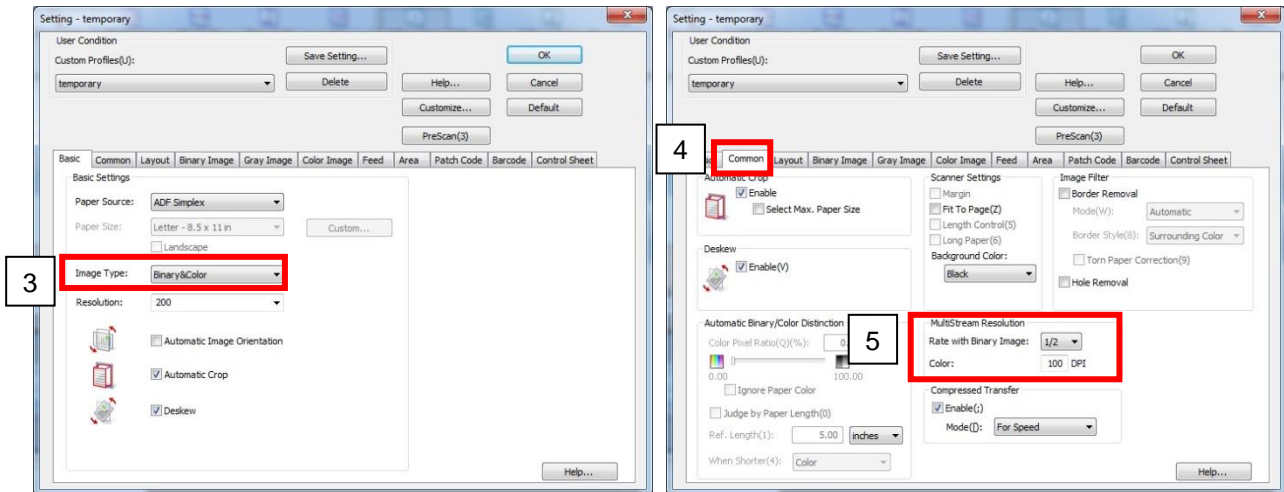
For example the document will be saved in monochrome (B/W) for OCR and archival purposes, and saved as a full color image for short term on-screen retrieval



### 【Demo Document】



Creates both color and monochromatic data in one scan

### <ICP Setting Procedures>



1. Click "Scan"  at the left side. The "New Document – Scan" dialog box is displayed.
2. Click "Scan Setting" .
3. Select "Binary & Color" under the Image Type scroll box
4. Select the "Common" tab
5. Select "1/2" for the Multi-Stream Resolution  
(If the 1/2 ratio is selected with 200 dpi serving as the Binary Image resolution, the color or gray resolution is set to 100 dpi.)
6. Click "OK".
7. Click the "Start" button to begin scanning.

### <Notes>

- The color or gray image resolution can be set to a ratio of 1/1, 1/2, 1/3 or 1/4 of the binary image resolution.