


## ◆ 2-Page Separation


<Function>

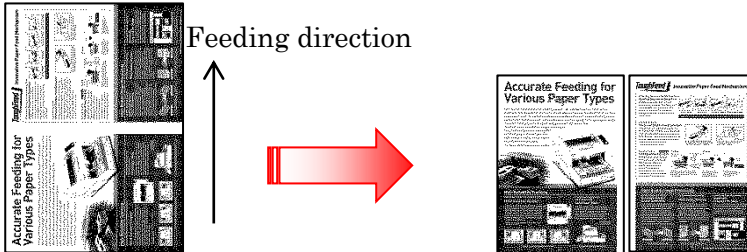



Separate 1 page (image) into 2 pages in the specified order.

【Demo Document】

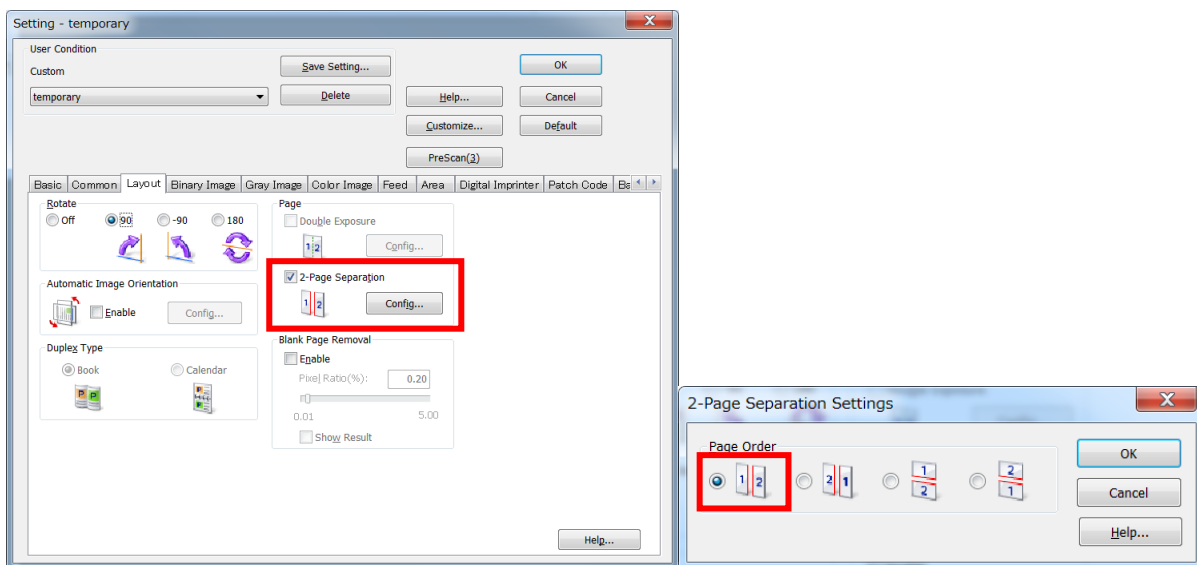

<ICP Setting Procedures>



1. Click "Scan"  at the left side. The "New Document – Scan" dialog box is displayed.
2. Click "Scan Setting" .
3. Select "Layout" tab.
4. Select  in "Rotate".
5. Check "2-Page Separation" in "Page".
6. Click "Config" and then Select . Click "OK".
7. Click "OK"
8. Click the "Start" button to begin scanning.

<Notes>

- This function cannot be used at the same time as Double Exposure, Long Paper, Scanning Area, or Multi-Crop.